

1) How to turn on karaoke player

a) Turn on the black power switch on the left side of the player.



- i) Wait 50 seconds for T.V. monitor to say, "no disk"
- ii) Press button left of the "0" (will say "D/U" or "Random")
- iii) Down arrow to "USB"
- iv) Press enter
- v) Down arrow to "Platinum"
- vi) Press enter
- vii) Wait 20 seconds
- viii) You now have the main menu showing number of songs

b) Now press "MPX" button to remove any lead (demonstration) Vocals. Monitor will say, "mono left". You are done!

How to pick songs

(1) To pick a song, enter the number from the book on the remote number pad. Do not type the first zeros. 00204 is 204.

(2) The name of the song will appear.

(3) Press "enter" to play song

(4) You can restart song with the double arrow with a line facing left.

(5) The volume of the music can be controlled on the remote. See the blue shaded area.

(6) Volume for microphones is on the back of the main speaker. Simply change main "volume".

(7) The enter button is a pause play button now.

Tips

(a) Match the music volume to the loudness of the singer. Not the mic. volume to music.

(b) Don't point mic. in the direction of the speakers.

(c) To program a song while one is running, type in the next number then press "PROG" (lower right in illustration.)



Please do not unplug any wires as long as the speaker power is on. You will blow out the speaker system. Un-plug first!

Please don't wind wires around mics. Please don't wind any wires tightly. Many of the cords are made of woven wires that break with every twist of the wire.

