

## HOW TO TURN ON WITH REMOTE

Turn on the silver power switch on the left side of the player. The TV screen will say "INITIALIZING" then say "Disc loading"

A) Wait 50 seconds or less for T.V. monitor to say, "no disk" if a disc is in the tray, TV will say CDDA.

B) Press button left of the "0" on key pad (will say "Random" or "D/U")

C) Down arrow to "USB" on TV screen.

D) Press enter

E) Down arrow to "Teen List" on TV screen.

F) Press enter.

G) You now have the main menu showing number of total songs

H) Now press "MPX" button to remove any lead (demonstration) Vocals. Monitor will say, "mono left". You are done!

### How to pick songs

(1) To pick a song, enter the number from the book on the remote number pad. Do not type the first zeros. 00204 is (204.)

(2) The name of the song will appear on the screen.

(3) Press "enter" or "play" to play song. These buttons are also pause.

(4) You can restart song with the double arrow with a line facing left.

(5) The volume of the music can be controlled on the remote. See the blue shaded area.

(6) Volume for microphones is on the back of the main speaker. Simply change main "volume".

### Tips

(a) Match the music volume to the loudness of the singer. Not the mic. volume to music.

(b) Don't point mic. in the direction of the speakers.

(c) To program a song while one is running, type in the next number then press "PROG" (lower right in top illustration.)

(d) Remember to point the remote at the karaoke player not the TV.

(e) Batteries in remote can get dislodged if the remote is dropped.

(f) Buttons on remote can get stuck in, if pushed too hard.

(g) You can always restart (reboot) if you have a problem.

(h) You can change the speed (tempo) of a song. Use double arrow to the right to speed up or left to slow down.

(i) You can change the pitch (key) b (flat), ♮ (natural) or # (sharp)

Please do not unplug any wires as long as the speaker power is on.

Un-plug from wall first! You could damage the speaker system.

Please don't wind wires around mics.

Please don't wind any wires tightly.

Cords are made of woven wires that break with every twist of the wire.

